




























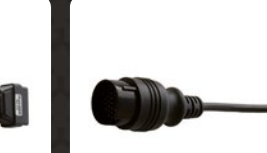








































OBD CABLE ADAPTERS

 <p>900 200 650 2+2 pin VAG</p> 	 <p>900 200 651 14 pin MB Sprinter+VW LT</p> 	 <p>900 200 652 10 pin Opel</p> 	 <p>900 200 653* 2 pin PSA</p> 	 <p>900 200 654 30 pin PSA</p> 	 <p>900 200 655 11 pin Renault</p> 	 <p>900 200 656 10 pin SAAB</p> 	 <p>900 200 657* 3 pin FIAT</p> 	 <p>900 200 658 20 pin BMW</p> 	 <p>900 200 659 38 pin MB</p> 
 <p>900 200 660* Ford, Volvo, VAG (FVV)</p> 	 <p>900 200 661 8 pin Volvo</p> 	 <p>900 200 662 16 pin Scania/DAF</p> 	 <p>900 200 663 12 pin MAN</p> 	 <p>900 200 664 37 pin MAN</p> 	 <p>900 200 665 30 pin Iveco</p> 	 <p>900 200 666 12 pin Renault</p> 	 <p>900 200 667 4 pin Haldex Trailer</p> 	 <p>900 200 669 7 pin Knorr/WABCO Trailer</p> 	 <p>900 200 671 4 pin Haldex (ECU) Trailer</p> 
 <p>900 200 693 7 pin ISO 7638 Trailer</p> 	 <p>900 200 673 38 pin Iveco</p> 	 <p>900 200 675 7 pin Knorr Trailer</p> 	 <p>900 200 677 9 pin Deutsch</p> 	 <p>900 200 679 4+4 pin Haldex ABS Trailer</p> 	 <p>900 200 681 9 pin Bus</p> 	 <p>900 200 682 3+6+9 pin ZF</p> 	 <p>900 200 683 18 pin Knorr</p> 	 <p>900 200 684 15 pin WABCO</p> 	 <p>900 200 685 25 pin WABCO</p> 
 <p>900 200 686 35 pin WABCO</p> 	 <p>900 200 687 5 pin Mini USB</p> 	 <p>900 200 688 9 pin Hübner</p> 	 <p>900 200 691 16 pin Power Adapter</p> 						

*This cable requires the OBD Power Cable 900 200 917 for Trucks or 900 200 924 for Cars

	 Passenger Car		 Light Commercial	 Bus
	 Light Commercial		 Heavy Commercial	 Trailer